



PARTS LIST

BRUSHCUTTERS

BC3501LE

BC3501WE

NOTE:

1. Use HUSQVARNA ZENOAH genuine parts as specified in the parts list for repair and/or replacement.
2. HUSQVARNA ZENOAH does not warrant the machines, which have been damaged by the use of any parts other than those specified by the company.
3. When placing parts orders for repair and/or replacement, check if the model name and the serial number are applicable to those specified in the parts list, then use parts number described in the parts list.
4. The contents described in the parts list are accurate as of the date and may change due to improvement.
5. The parts for the machine shall be supplied ten (10) years after the machine is discontinued. [It is possible that some specific parts may be subject to change of their delivery term and list price within the limit of ten (10) years after the machine is discontinued. It is also possible that some parts may be available even after the limit of ten (10) years.]

Fig.1 CUTTER GROUP LE	2
Fig.2 CUTTER GROUP WE	4
Fig.3 ENGINE GROUP	4

APPLICABLE SERIAL NUMBERS:

APPLICABLE SERIAL NUMBERS:

71000101 and up

January 2018

BC3501LE

Fig.1 CUTTER GROUP

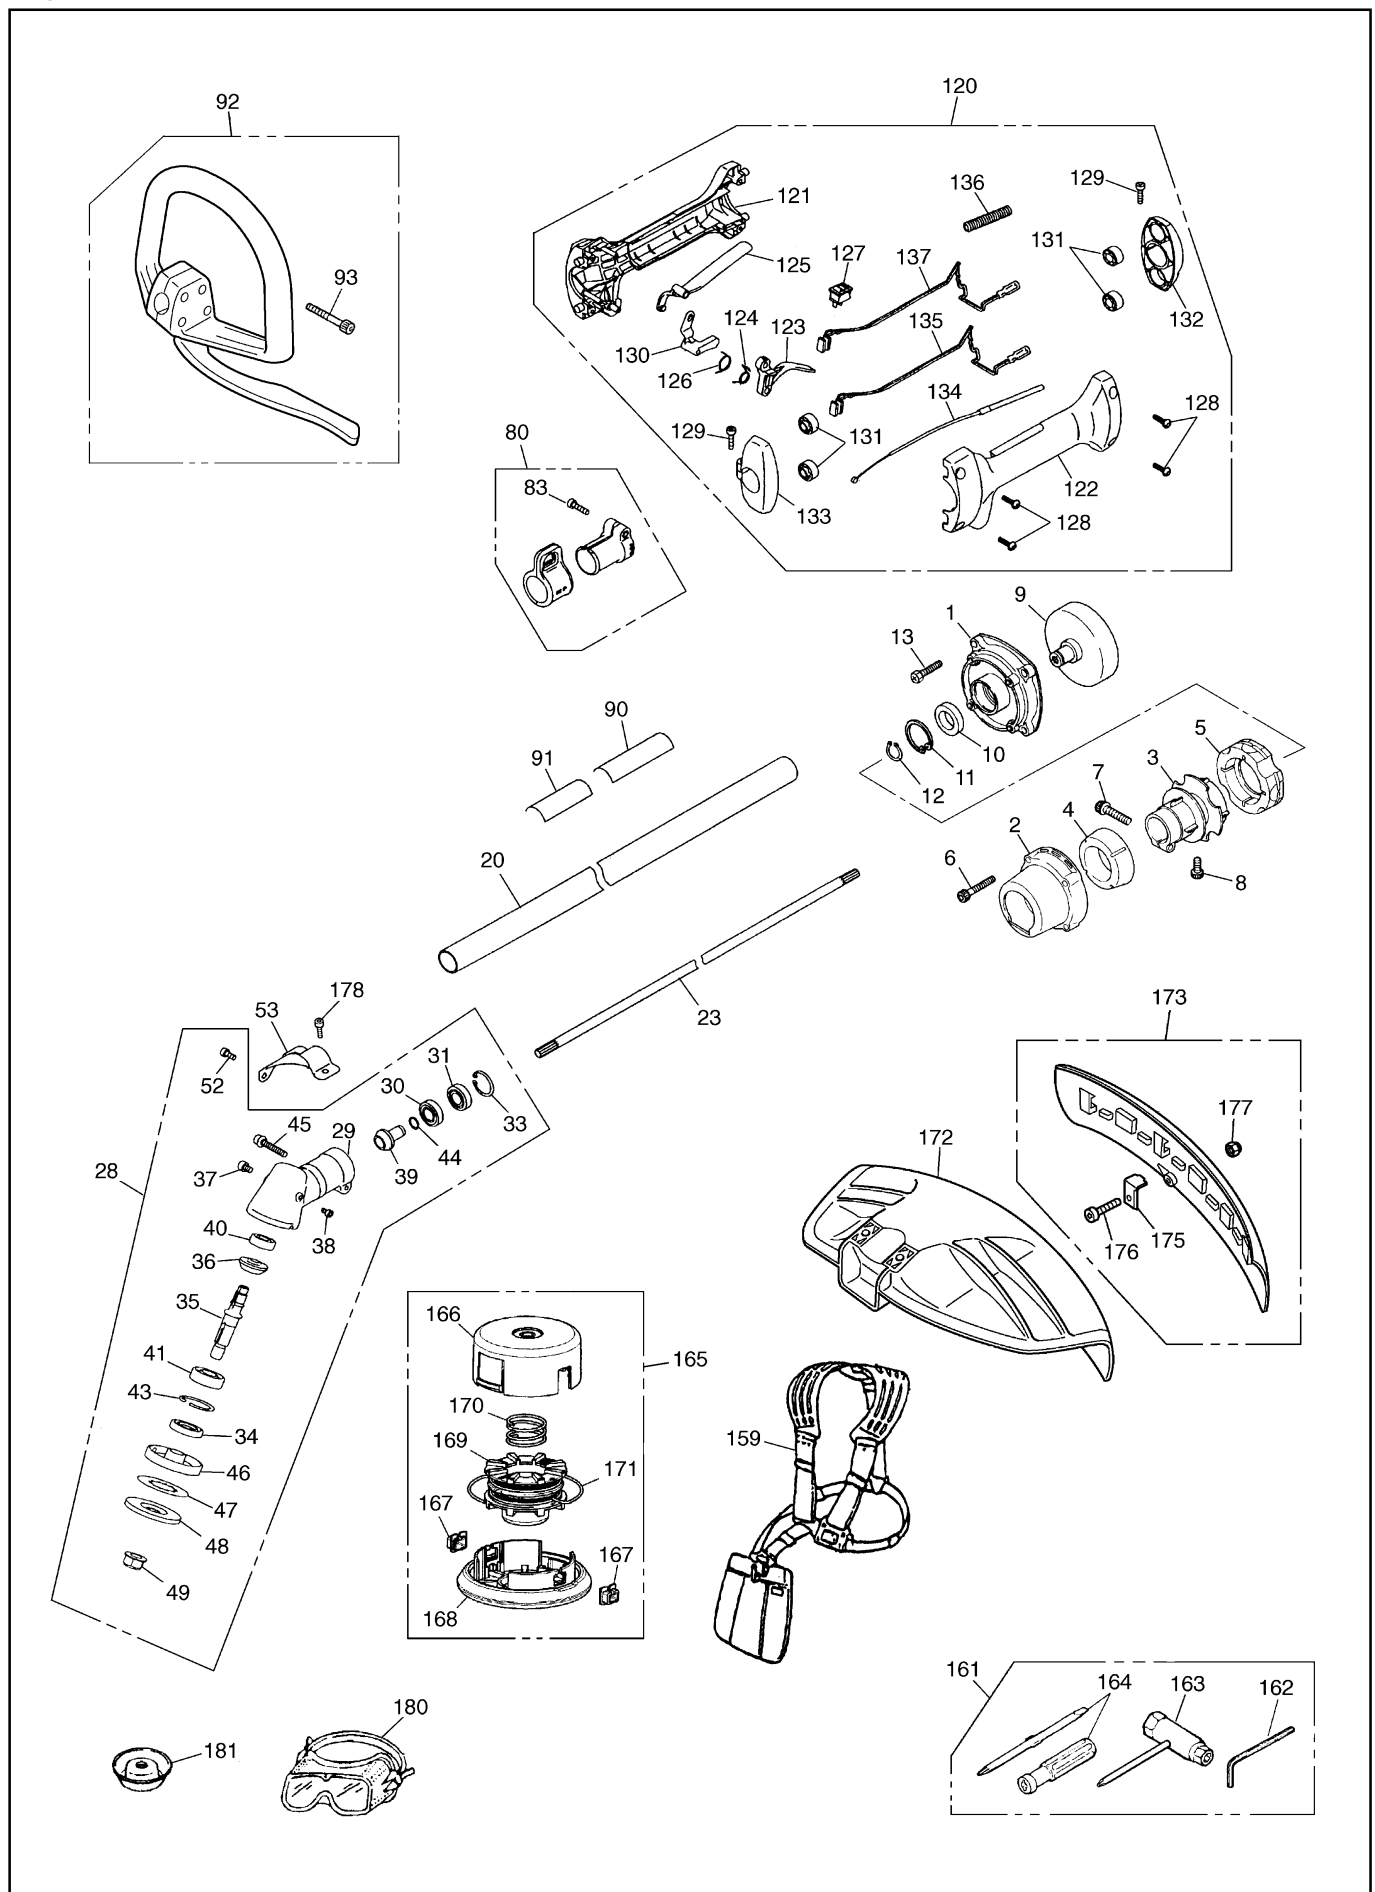


Fig.1 CUTTER GROUP

Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE
1	4050-11110	HOUSING	1		120	573 97 65-01	GRIP ASSY	1	
2	4050-11150	CAP	1		121	573 97 68-01	• BODY-R	1	
3	T3042-11210	JOINT	1		122	573 97 69-01	• BODY-L	1	
4	4050-11250	ABSORBER-F	1		123	573 97 71-01	• LEVER	1	
5	4050-11260	ABSORBER-R	1		124	848JL233D3	• SPRING	1	
6	4820-21310	BOLT T27	4	M5xL30	125	848JL233E2	• LEVER-S	1	
7	T4950-63040	BOLT T27	1	M6xL30	126	848JL233F3	• SPRING	1	
8	4820-12350	BOLT T27	1	M5xL10	127	T4506-52110	• SWITCH	1	
9	591 42 58-01	DRUM	1		128	8488251601	• SCREW T27	4	TP5(P-tight)xL16
10	06004-06202	BEARING	1		129	4820-13180	• BOLT TORX T27	2	M5xL20
11	04065-03515	RING	1		130	573 97 70-01	• LEVER	1	
12	04064-01510	RING	1		131	848JL233H3	• ABSORBER	4	
13	T4950-62040	BOLT T27	4	M6xL20	132	848JL233K3	• HOLDER REAR	1	
					133	848JL233J2	• HOLDER FRONT	1	
20	T3042-12100	PIPE COMP.	1	1500x28xT2	134	574 27 03-01	• CABLE COMP.	1	
23	6340-12211	SHAFT, spline ϕ 8x9tooth	1	1540x8	135	8488M10070	• CORD COMP., BLACK	1	CA104
					136	6420-14511	• TUBE	1	
28	848JJ76100	GEARCASE ASSY	1		137	8488M10660	• CORD COMP., RED	1	CB104
29	848JL061A2	• GEARCASE	1		159	6220-17202	HARNESS ASSY	1	
30	06000-06001	• BEARING	1		161	8488U00210	TOOL SET	1	
31	06001-06001	• BEARING	1		162	09007-00425	• WRENCH	1	
33	04065-02812	• RING	1		163	8488U10050	• SOCKET	1	
34	8488AL3500	• SEAL	1		164	1030-91340	• DRIVER	1	
35	848JJ761B0	• SHAFT	1		165	848BU36914	TAPHEAD ASSY	1	
36	848JL061C3	• GEAR	1		166	848BU369M4	• CASE	1	
37	T4950-60800	• BOLT TORX T27	1	M6xL8	167	T3189-15191	• EYELET	2	
38	T4950-40800	• BOLT TORX T27	1	M4xL8	168	T3189-15132	• COVER	1	
39	848JJ761D1	• PINION	1		169	T3189-15142	• CORD HOLDER	1	
40	06000-06000	• BEARING	1		170	T3189-15160	• SPRING	1	
41	06004-06202	• BEARING	1		171	848BU369S0	• CORD	1	
					172	848JL066A5	GUARD	1	
43	04065-03515	• RING, SNAP	1		173	848JL06635	GURD ASSY	1	
44	3130-13270	• RING	1						
45	T4950-63540	• BOLT TORX	1		175	848JL066B2	• BLADE	1	
46	848JL061F4	• HOLDER (A)	1		176	4820-72150	• BOLT TORX T27	1	M4xL16
47	848JL061L0	• PLATE	1		177	3238-13150	• NUT	1	
48	848JL061G2	• HOLDER (B)	1		178	T4950-63040	BOLT TORX T27	2	M6xL30
49	T3002-13260	• NUT	1	M10xP1.25					
					180	6242-92110	GOGGLE	1	
52	T1501-32120	• BOLT TORX T27	1	M5xL12	181	848JG061J1	COVER	1	
53	848JL066C3	PLATE	1						
80	848JL23812	HANGER ASSY							
		• HANGER	1						
		• CLAMP							
83	4820-13180	• BOLT TORX T27	1	M5xL20					
90	848JEA90R0	PLATE NAME	1						
91	8488X10020	PLATE	1						
92	T3114-14000	HANDLE ASSY	1						
93	0263-90530	• SCREW	4						

Fig.2 CUTTER GROUP

Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE
1	4050-11110	HOUSING	1		83	4820-13180	• BOLT TORX T27	1	M5xL20
2	4050-11150	CAP	1		90	848JJ890R0	PLATE NAME	1	
3	T3042-11210	JOINT	1		91	8488X10020	PLATE	1	
4	4050-11250	ABSORBER-F	1		110	848JJ83220	HANDLE (L) ASSY	1	
5	4050-11260	ABSORBER-R	1		120	848JJ83210	HANDLE (R) ASSY	1	
6	4820-21310	BOLT T27	4	M5xL30	122	8488R40510	GRIP ASSY	1	
7	T4950-63040	BOLT T27	1	M6xL30	123	576 04 53-01	•• HANDLE, HALF SET	1	
8	4820-12350	BOLT T27	1	M5xL10	125	848JL033C3	•• LEVER	1	
9	591 42 58-01	DRUM	1		126	848JL033D2	•• SPRING	1	
10	06004-06202	BEARING	1		127	848JL033E3	•• LEVER-S	1	
11	04065-03515	RING	1		128	T4506-52110	•• SWITCH	1	
12	04064-01510	RING	1		129	8488241600	•• SCREW	4	
13	T4950-62040	BOLT T27	4	M6xL20	130	T4960-53010	•• SCREW TORX	1	
20	T3042-12100	PIPE COMP.	1		131	3320-15310	•• NUT	1	
23	6340-12211	SHAFT	1		132	8488P00430	•• CABLE COMP.	1	
28	848JJ76100	GEARCASE ASSY	1		133	8488M10640	•• CORD COMP., RED	1	CB104
29	848JL061A2	• GEARCASE	1		134	8488M10450	•• CORD COMP., BLACK	1	CA104
30	06000-06001	• BEARING	1		135	T3004-14810	•• TUBE	1	
31	06001-06001	• BEARING	1		159	6220-17202	HARNESS ASSY	1	
33	04065-02812	• RING	1		161	8488U00210	TOOL SET	1	
34	8488AL3500	• SEAL	1		162	09007-00425	• WRENCH	1	
35	848JJ761B0	• SHAFT	1		163	8488U10050	• SOCKET	1	
36	848JL061C3	• GEAR	1		164	1030-91340	• DRIVER	1	
37	T4950-60800	• BOLT TORX	1		165	848BU36914	TAPHEAD ASSY	1	
38	T4950-40800	• BOLT TORX	1		166	848BU369M4	• CASE	1	
39	848JJ761D1	• PINION	1		167	T3189-15191	• EYELET	2	
40	06000-06000	• BEARING	1		168	T3189-15132	• COVER	1	
41	06004-06202	• BEARING	1		169	T3189-15142	• CORD HOLDER	1	
43	04065-03515	• RING, SNAP	1		170	T3189-15160	• SPRING	1	
44	04064-01210	• RING	1		171	848BU369S0	• CORD	1	
45	T4950-63540	• BOLT TORX	1		172	848JL066A5	GUARD	1	
46	848JL061F4	• HOLDER (A)	1		173	848JL06635	GURD ASSY	1	
47	848JL061L0	• PLATE	1		175	848JL066B2	• BLADE	1	
48	848JL061G2	• HOLDER (B)	1		176	4820-72150	• BOLT TORX T27	1	M4xL16
49	T3002-13260	• NUT	1	M10xP1.25	177	3238-13150	• NUT	1	
52	T1501-32120	• BOLT TORX T27	1	M5xL12	178	T4950-63040	BOLT TORX T27	2	M6xL30
53	848JL066C3	PLATE	1		179	6242-92110	GOGGLE	1	
70	848JL132K1	BRACKET-UP	1		180	848JG061J1	COVER	1	
71	848JL132B2	BRACKET	1						
72	848JL132C2	HOLDER	2						
73	848JL132D1	HOLDER	2						
74	848JL132E2	CUSHION	6						
75	4820-13180	BOLT TORX T27	4	M5xL20					
76	T4950-52540	BOLT TORX	2						
77	848JL132L2	CLAMP	2						
80	848JL23812	HANGER ASSY	1						
		• HANGER	1						
		• CLAMP	1						

BC3501LE/ BC3501WE

Fig.3 ENGINE GROUP

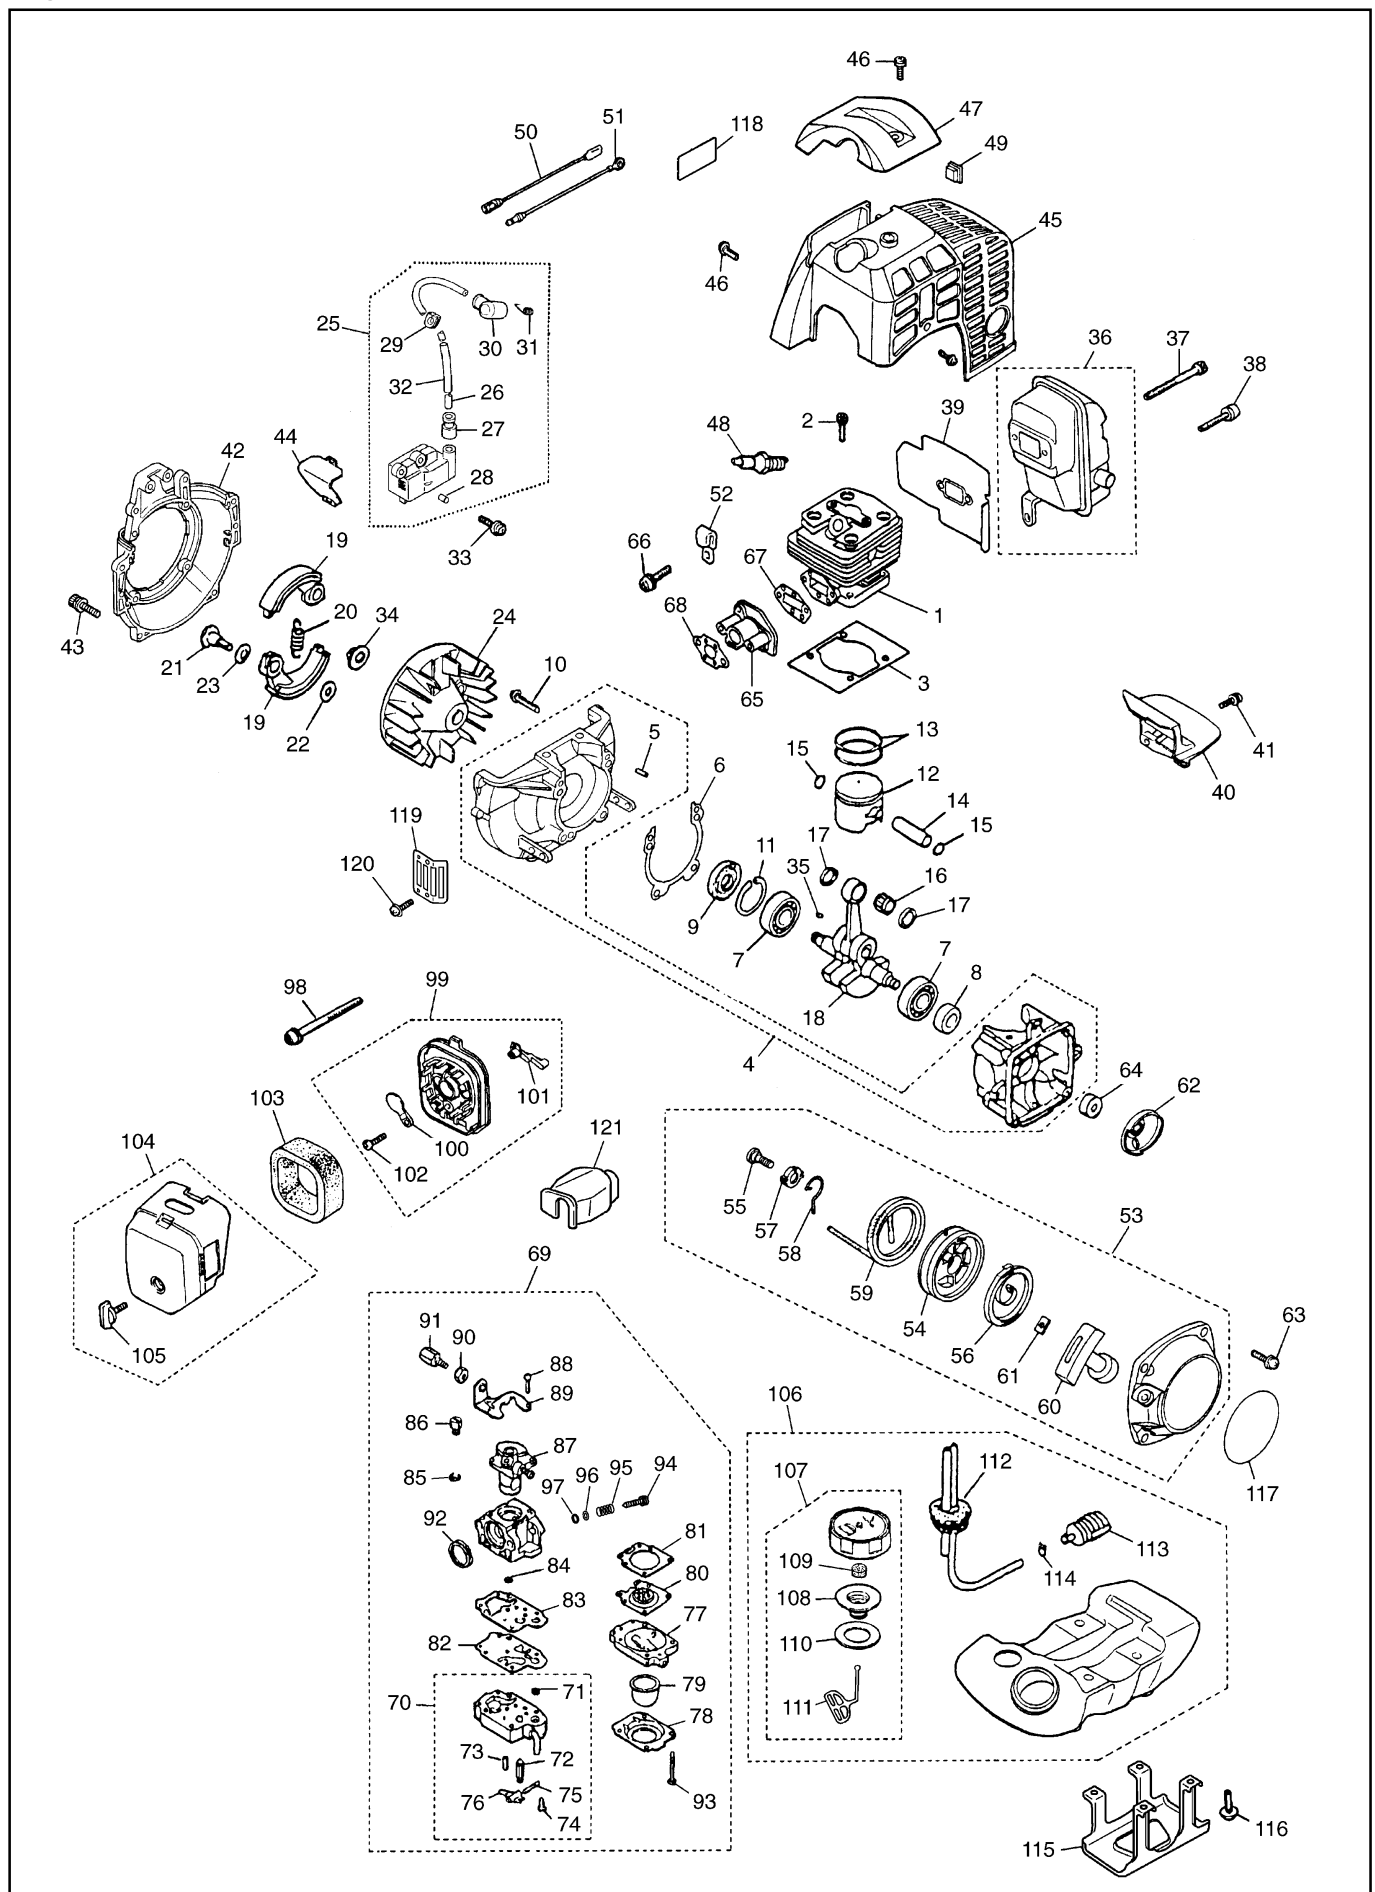


Fig.3 ENGINE GROUP

Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE	Key#	PART NUMBER	DESCRIPTION	Q'ty /UNIT	NOTE
1	T1151-12110	CYLINDER	1	M5x20	62	4500-75210	PULLEY	1	WYK-155
2	1850-12130	BOLT	4		63	4500-75511	SCREW	4	
3	4500-13120	GASKET, base	1		64	4700-75310	COLLAR	1	
4	4500-21101	CRANKCASE COMP.	1		65	4500-13162	INSULATOR	1	
5	2629-21130	• PIN	3	M5x30	66	4500-13181	SCREW	2	
6	4500-21140	GASKET, case	1		67	848G6014B1	GASKET, insulator	1	
7	06030-06201	BEARING	2		68	4500-13130	GASKET, carburetor	1	
8	4810-21210	OIL SEAL	1		69	T1157-81000	CARBURETOR ASSY	1	
9	1650-21220	OIL SEAL	1		70	1850-81450	• BODY ASSY	1	
10	01252-30530	BOLT	4		71	3306-81380	• • SCREEN	1	
11	04065-03212	SNAP RING	1		72	3356-81310	• • VALVE	1	
12	4700-41110	PISTON	1		73	1850-81270	• • SPRING	1	
13	8488C36300	RING	2		74	1850-81220	• • SCREW	1	
14	8488BA3000	PIN	1		75	3310-81250	• • PIN	1	
15	1300-41320	RING	2		76	3310-81230	• • LEVER	1	
16	T2100-41410	BEARING	1		77	1850-81490	• BODY, purge	1	
17	2850-41510	WASHER	2		78	1850-81520	• COVER, pump	1	
18	4500-42000	CRANKSHAFT COMP.	1		79	1751-81510	• PUMP, priming	1	
19	1400-51111	SHOE, clutch	2		80	3310-81260	• DIAPHRAGM	1	
20	1651-51220	SPRING	1		81	1850-81470	• GASKET, diaphragm	1	
21	1200-51211	SCREW	2		82	1065-81420	• DIAPHRAGM, pump	1	
22	1200-51230	WASHER	2		83	1065-81410	• GASKET, pump	1	
23	1200-51241	WASHER	2		84	5500-81160	• WASHER	1	
24	T1153-71110	ROTOR	1		85	1751-81130	• RING	1	
25	T1153-71200	COIL ASSY	1		86	1881-81140	• SWIVEL	1	
26	4500-71220	• CORD	1		87	4700-81150	• VALVE ASSY	1	
27	2616-71320	• CAP	1		88	1752-81110	• SCREW	2	
28	T1153-71250	• PIN	2		89	5500-81120	• BRACKET	1	
29	5500-72130	• GROMMET	1		90	1751-81180	• NUT, adjuster	1	
30	5500-72110	• CAP, plug	1		91	5730-81170	• SCREW, adjuster	1	
31	5500-72120	• SPRING	1		92	1881-81130	• RING	1	
32	T1512-71320	• TUBE	1		93	1850-81530	• SCREW	4	
33	3350-14150	BOLT	2	M4x20	94	1484-81610	• NEEDLE, high	1	
34	1650-43230	NUT	1		95	1491-81160	• SPRING	1	
35	1000-43240	KEY	1		96	1881-81190	• WASHER	1	
36	4700-15110	MUFFLER ASSY	1		97	1881-81240	• O-RING	1	
37	01252-30560	BOLT	2	M5x60	98	0263-90550	SCREW	2	
38	3310-31720	BOLT	1		99	T1184-82101	BODY ASSY	1	
39	4700-15212	GASKET	1	M5x14	100	T1184-82130	• PLATE, choke	1	
40	4500-15221	PLATE	1		101	4500-82140	• LEVER, choke	1	
41	0263-90514	SCREW	1	M5x20	102	2630-33610	• SCREW	1	
42	T1117-31111	COVER	1		103	4500-82170	ELEMENT	1	
43	3310-12281	BOLT	4		104	4500-82202	COVER ASSY	1	
44	4500-31210	PLATE	1		105	5500-82221	• KNOB	1	
45	4500-32110	COVER	1		106	T1013-85002	TANK ASSY	1	
46	4500-32120	SCREW	4		107	T1015-85202	• CAP ASSY	1	
47	4500-32210	GUARD	1		108	4500-85300	• • HOLDER ASSY	1	
48	3699-90332	SPARKPLUG	1		109	5601-85260	• • FILTER	1	
49	1852-72121	GROMMET	1		110	4500-85220	• • PACKING	1	
50	T1153-71240	CORD	1		111	4820-85260	• • STOPPER	1	
51	T1006-73230	CORD, earth	1		112	5500-85300	• PIPE COMP.	1	
52	8488K40010	CLAMP	1		113	3302-85400	• FILTER ASSY	1	
53	4500-75100	RECOIL ASSY	1		114	1260-85460	• CLIP	1	
54	4500-75120	• REEL	1		115	T1184-31911	GUARD	1	
55	4500-75150	• SCREW	1		116	0263-90525	SCREW	4	
56	1850-75130	• SPRING, spiral	1		117	T1072-75411	LABEL, recoil	1	M5x4
57	4500-75180	• COLLAR	1		118	1970-31151	LABEL	1	
58	4500-75190	• ARM	1		119	4500-22110	GUARD	1	
59	4500-75160	• ROPE	1		120	0263-90514	SCREW	1	
60	1140-75320	• KNOB	1		121	4500-81910	COVER	1	
61	5500-75170	• PLATE, stopper	1						