


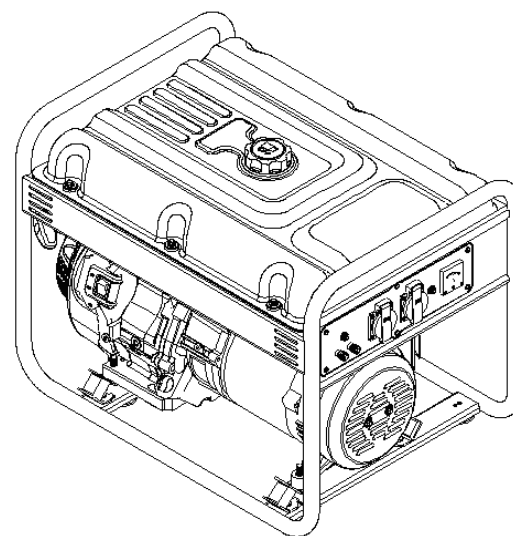


发电机零部件图册 DRAWING OF GENERATOR

LC6500-J




隆鑫通用动力股份有限公司
LONCIN MOTOR CO., LTD

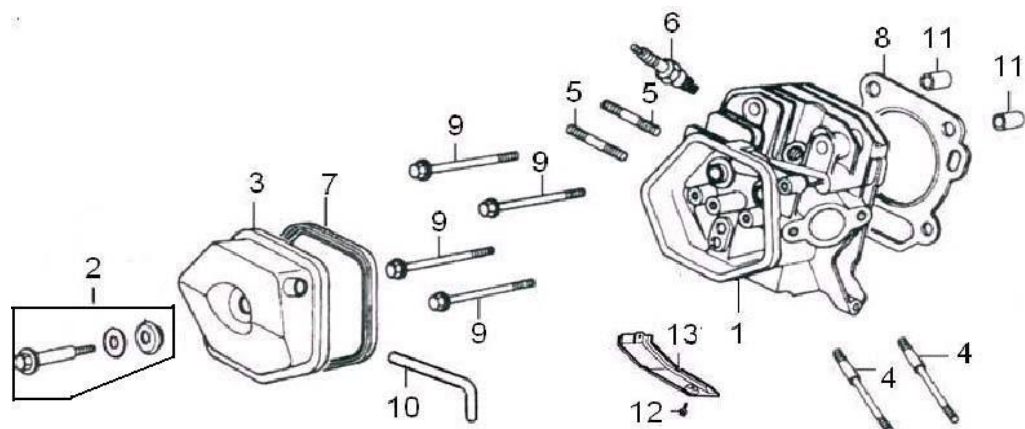


气缸头 (Cylinder head)

序号	零部件编号	零部件名称	Description	数量 (Quantity)
Ser.No	Part No.			6500-J
1	120080278-T110	气缸头	HEAD COMP., CYLINDER	1
2	120420011-T110	气缸头盖螺栓组合	BOLT COMP., HEAD COVER	1
3	120220009-T110	气缸头盖组合	COVER COMP. HEAD	1
4	380180112-T560	双头螺栓6-8×110	BOLT, STUD, INTAKE 6-8×106	2
5	380180098-T040	双头螺栓8×34	BOLT, STUD, EXHAUST 8×34	2
6	270960025-T040	火花塞	SPARK PLUG	1
7	380840425-T110	密封圈	GASKET,CYLINDER	1
8	120150137-T11D	气缸头密封垫	SEALING PAD, CYLINDER	1
9	380140337-T110	六角头法兰面螺栓M10×80	BOLT, FLANGE M10×80	4
10	380740461-T560	通气管	TUBE, BREATHER	1
11	380600116-T110	定位销12×20	PIN, DOWEL 12×20	2
12	380140001-0006	六角头法兰面螺栓M6×12	BOLT, FLANGE M6×12	1
13	160190006-T110	空气导流罩	SHROUD	1

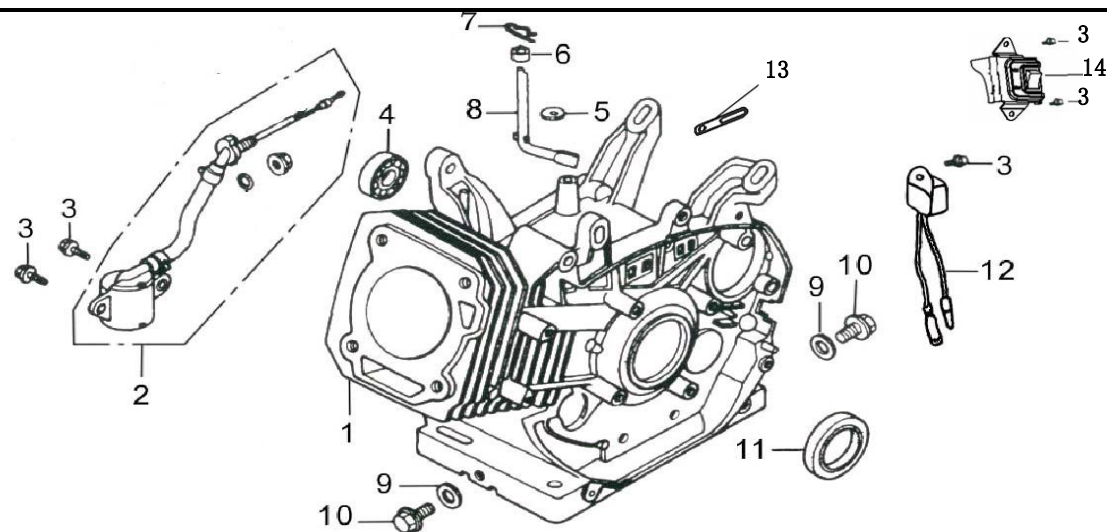


曲轴箱体（Crankcase）

序号	零部件编号	零部件名称	Description	数量（Quantity）
Ser.No	Part No.			LC6500-J
1	110810014-T110	曲轴箱体	CRANKCASE	1
2	281850152-T110	油位传感器	SWITCH ASSY., OIL LEVEL	1
3	380140001-0006	六角头法兰面螺栓M6×12	BOLT, FLANGEM6×12	5
4	380630099-0001	轴承6202	BEARING, RADIAL BALL 6202	1
5	380450522-T110	平垫圈 8×16×1.2	WASHER, PLAIN 8×16×1.2	1
6	380650339-T110	油封8×14×7	OIL SEAL 8×14×7	1
7	381350004-T040	销夹	PIN, LOCK	1
8	171630003-T110	调速臂	SHAFT, GOVERNOR ARM	1
9	380450516-0001	平垫圈12×20×2	WASHER, DRAIN PLUG12×20×2	2
10	110260024-T110	密封螺塞M12×1.5×15	BOLT, DRAIN PLUG M12×1.5×15	2
11	380650337-T110	油封35×52×7	OIL SEAL 35×52×7	1
12	281890001-T040	机油保护器	ALERT UNIT,OIL	1
13	380940346-0001	线夹	CABLE CLEAT	1
14	271810018-T611	启动控制开关	STATUP SWITH	1

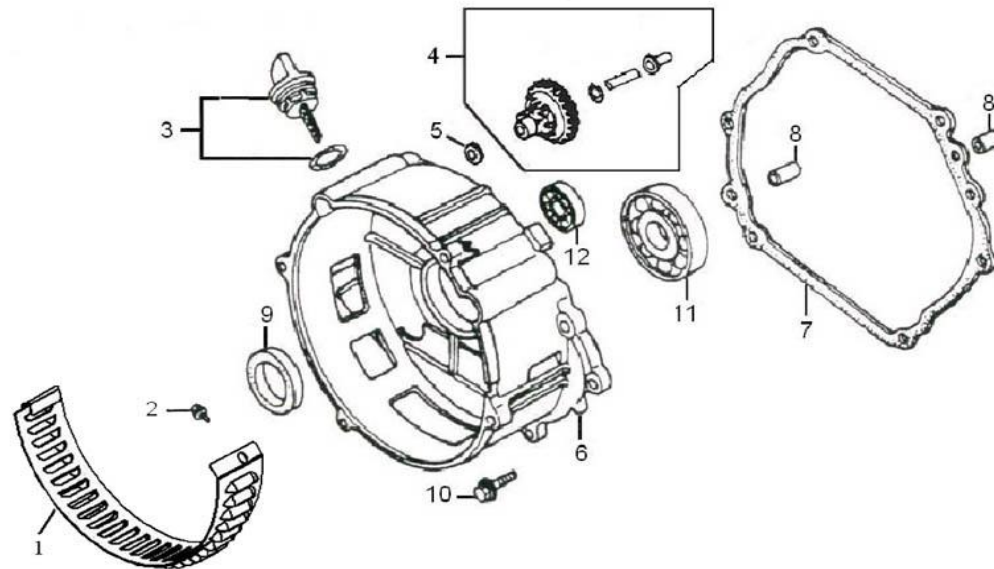


曲轴箱盖（Crankcase cover）

序号	零部件编号	零部件名称	Description	数量（Quantity）
Ser.No	Part No.			LC6500-J
1	660040006-T560	电机风罩	COVER, DUST	1
2	380140167-0002	六角法兰面螺栓M5×12	BOLT, FLANGE M5×12	1
3	110690039-T560	机油尺组合	CAP COMP., OIL FILLER	1
4	171750004-T110	调速齿轮部件	GOVERNOR ASSY.	1
5	380450531-T040	平垫圈 6×13×1	WASHER, PLAIN 6×13×1	1
6	110820012-T560	曲轴箱盖	CRANKCASE COVER	1
7	110830008-T11D	曲轴箱盖密封垫	PACKING, CASE COVER	1
8	380600119-0001	定位销8×12	PIN, DOWEL 8×12	2
9	380650337-T110	油封35×52×7	OIL SEAL 35×52×7	1
10	380140005-0006	六角头法兰面螺栓M8×40	BOLT, FLANGE M8×40	7
11	380630141-0002	轴承 6207	BEARING, RADIAL BALL 6207	1
12	380630099-0001	轴承 6202	BEARING, RADIAL BALL 6202	1

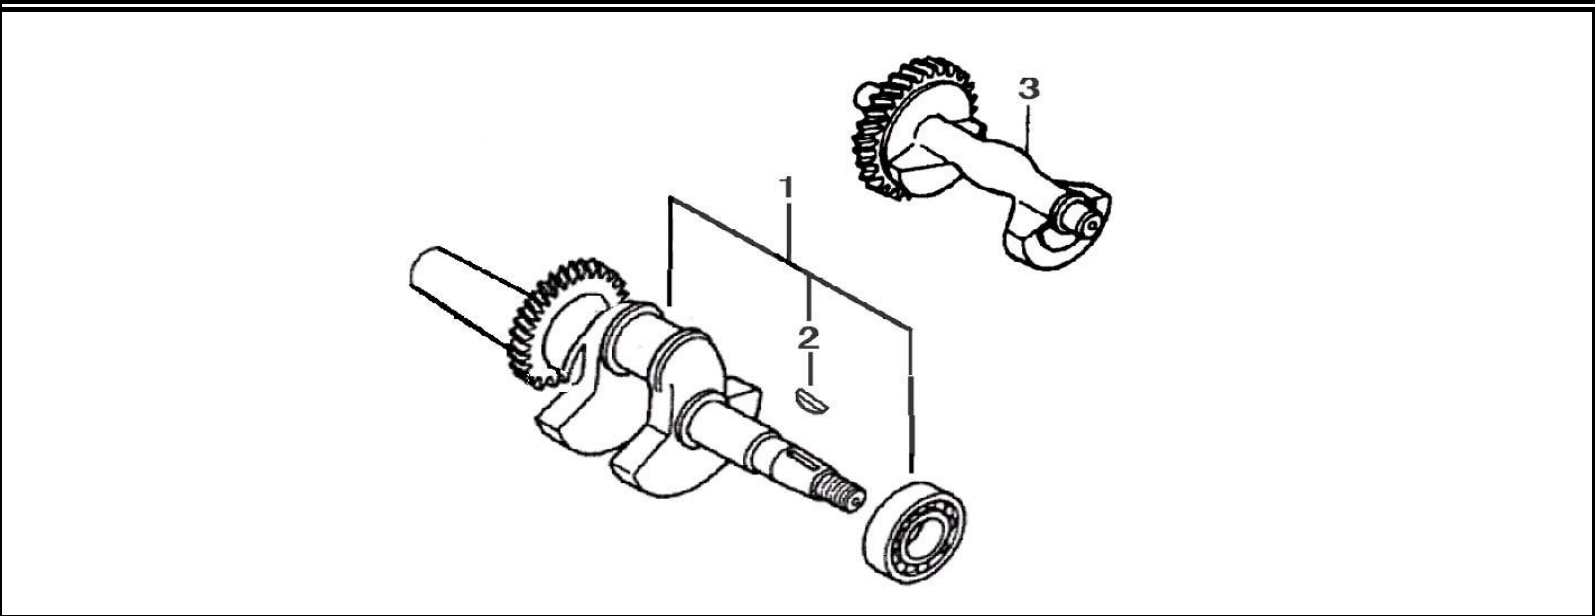


曲轴 (Crankshaft)

[illegible]

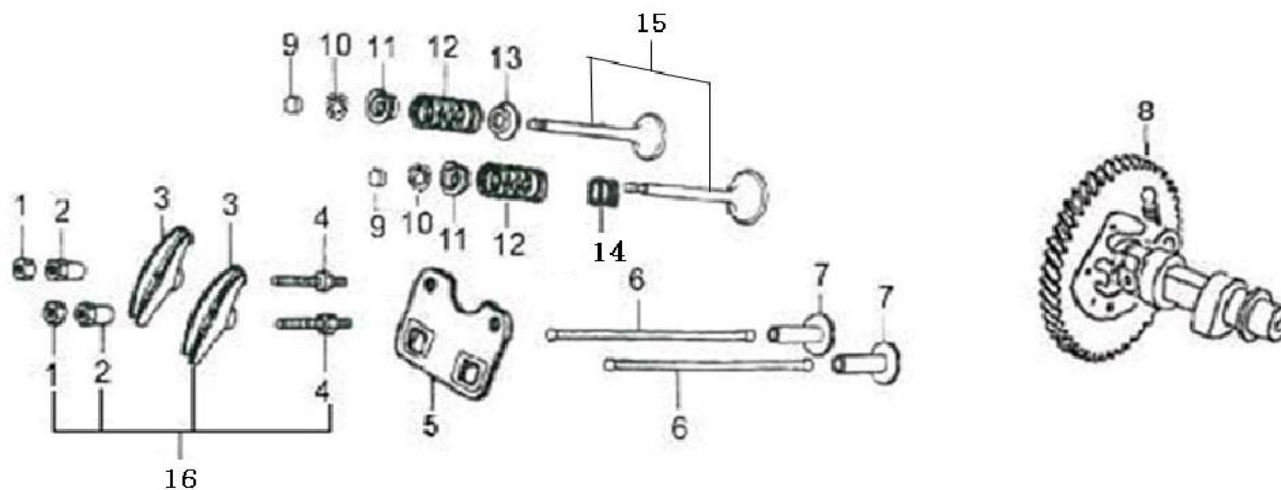


凸轮轴 (Camshaft)

序号 Ser.No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. No.) LC6500-J
1	140470001-T040	气门锁紧螺母	NUT, PIVOT ADJUSTING	2
2	140490012-T040	气门调节螺母	PIVOT ROCKER ARM	2
3	140460024-T110	气门摇臂	ROCKER ARM	2
4	140480012-T040	气门调节螺栓	BOLT POVIT	2
5	140710002-T110	推杆限位板组合	Plate Assy.	1
6	140670006-T110	挺杆	PUSH ROD	2
7	140690004-T110	挺柱	LIFTER, VALVE	2
8	140020045-T110	凸轮轴组合	CAMSHAFT ASSY.	1
9	140320002-T110	气门调整帽	ROTATOR, VALVE	2
10	140390015-T11D	气门锁夹	VALVE KEEPER	4
11	140380021-T11D	气门弹簧座	RETAINER, EX. VALVE SPRING	2
12	140340025-T11D	气门内弹簧	SPRING, VALVE	2
13	140360010-0001	气门内弹簧座圈	SEAT, VALVE SPRING	1
14	140400012-T110	挡油罩	SEAL, VALVE STEM	1
15	500550030-0001	气门套件	VALVE KIT	1
16	140450023-0001	气门摇臂组合	ROCKER ARM COMP.	2

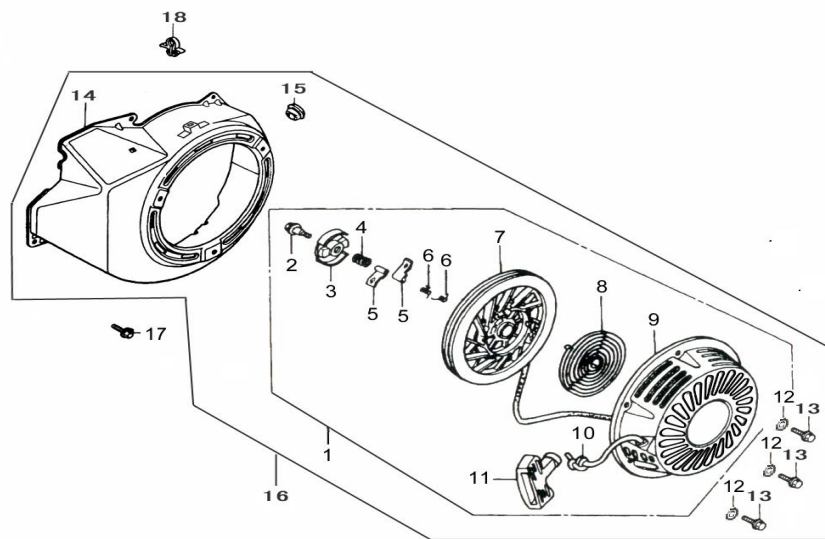


起动器 (Starter)

序号	零部件图号	零部件名称	Description	数量 (Reqd. No.)
Ser.No.	Part No.			LC6500-J
1	193500017-T110	手起动部件	STARTER ASSY.	1
2	380020067-T040	六角头轴肩螺栓	SCREW, SETTING	1
3	193550003-T040	驱动导向板	GUIDE, RATCHET	1
4	381150342-T040	压簧	SPRING, FRICTION	1
5	193540003-T040	驱动凸轮	RATCHET, STARTER	2
6	381160090-T040	扭簧	SPRING, RETURN	2
7	193520005-T110	拉绳盘	REEL, RECOIL STARTER	1
8	193340019-T110	起动复位弹簧	SPRING, RECOIL STARTER	1
9	193640007-T110	拉绳盘罩	COVER COMP., FAN	1
10	193530005-T110	拉绳	ROPE	1
11	193560003-T040	拉绳手柄	KNOB, RECOIL STARTER	1
12	380450004-0003	平垫圈6	WASHER	3

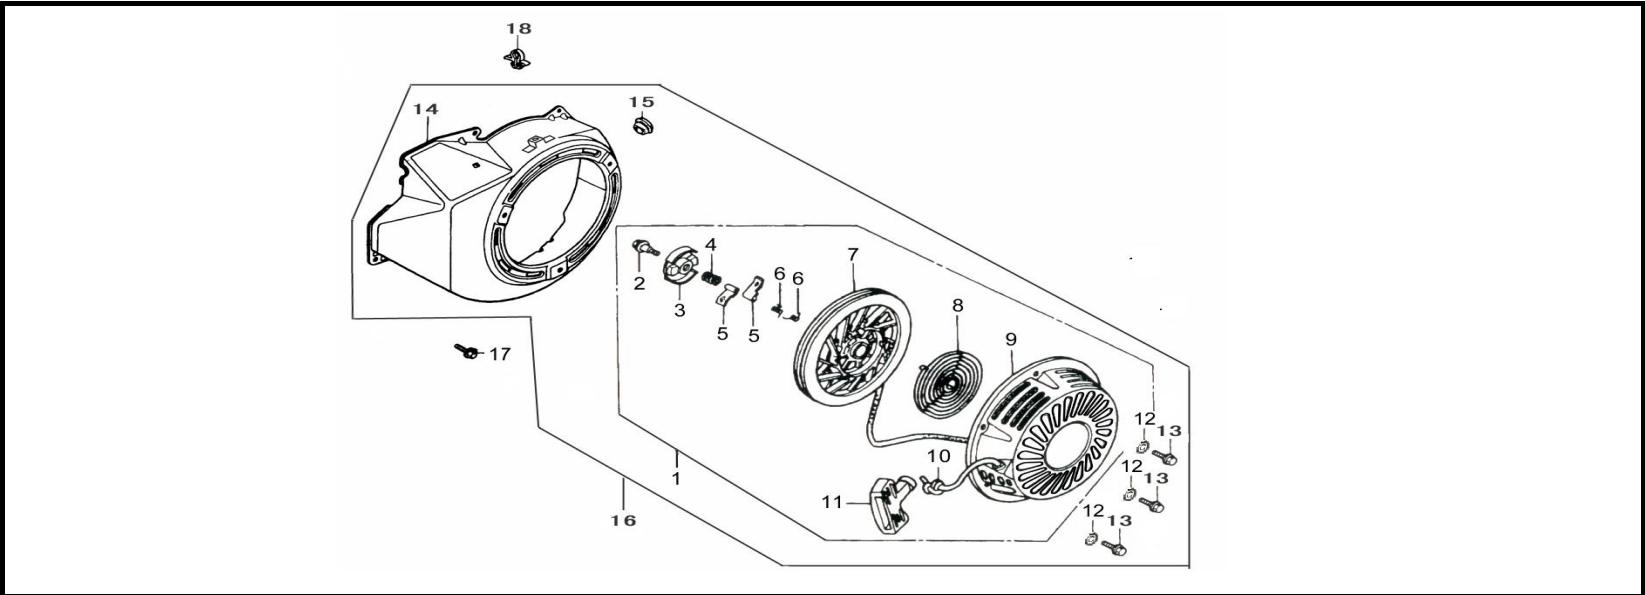


起 动 器 (Starter)

[illegible]

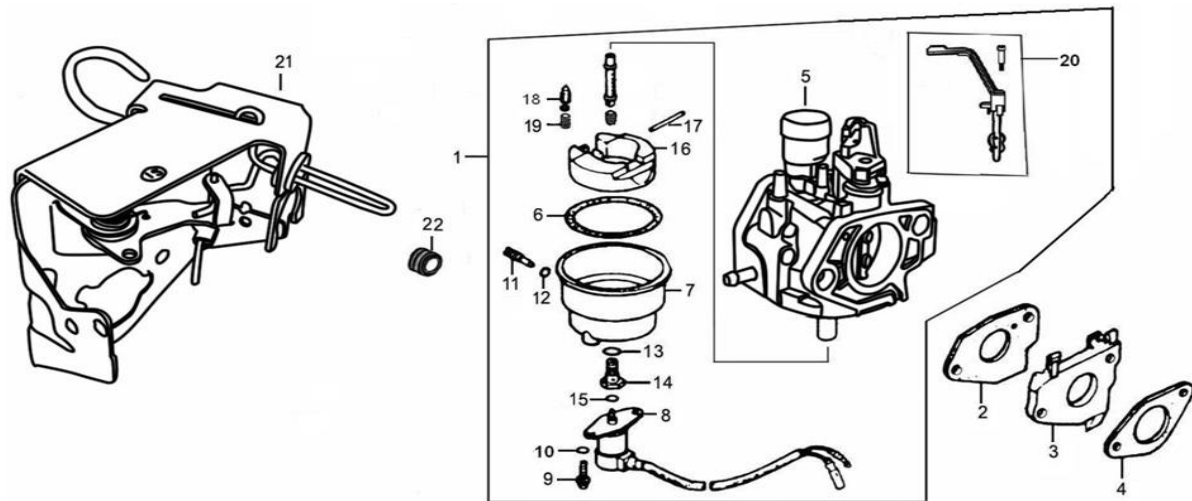


化油器 (Carburetor)

序号 Ser.No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. No.) LC6500-J
1	170021078-T560	化油器	CARBURETOR ASSY.	1
2	170430050-T11D	化油器密封垫	GASKET, CARBURETOR	1
3	170440041-T110	化油器隔热垫	SPACER, CARBURETOR	1
4	170430062-T11D	化油器密封垫	GASKET, INSULATOR	1
5	170160041-T560	化油器主体	NOUMENON,CARBURETOR	1
6	380840456-T110	密封圈	GASKET, OIL CUP	1
7	170250023-T560	浮子室	OIL CUP	1
8	170420002-T560	电磁阀	VALVE ASSY., SOLENOID	1
9	380200006-0001	十字槽盘头螺钉	SCREW, PAN	2
10	380460005-0007	弹性垫圈	WASHER, SPRING	2
11	172930001-T560	油杯放油螺塞	DRAIN BOLT	1
12	380450577-T040	密封圈(放油螺栓垫片)	GASKET,OIL CUP	1

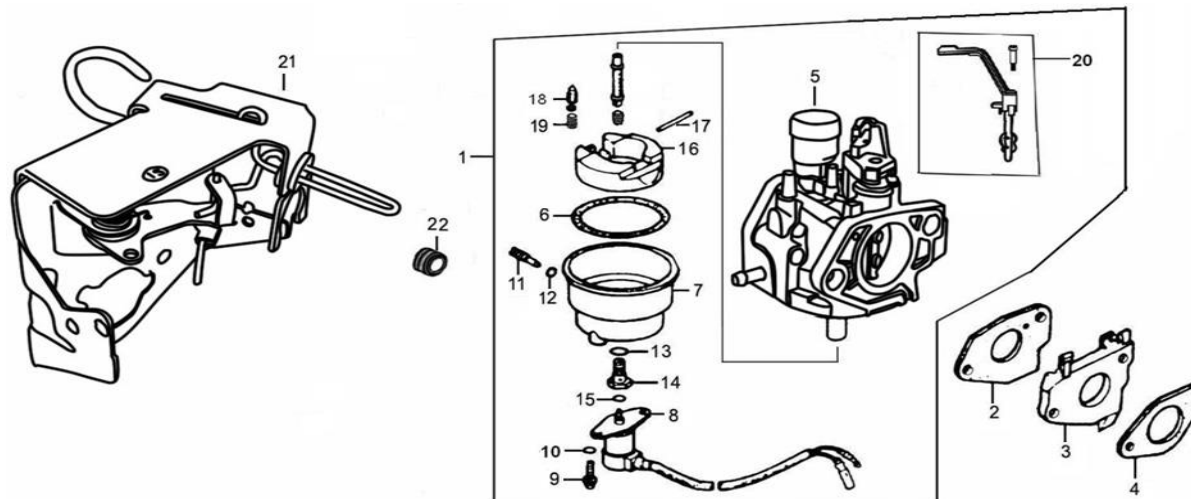


化油器 (Carburetor)

序号	零部件图号	零部件名称	Description	数量 (Reqd. No.)
Ser.No.	Part No.			LC6500-J
13	380840841-T560	密封圈	GASKET, BOLT, OIL CUP	1
14	380140354-0001	六角头法兰面螺栓	BOLT, OIL CUP	1
15	380840519-T560	电磁阀密封圈	GASKET, SOLENOID	1
16	170280020-T110	浮子	FLOAT	1
17	170290016-T110	浮子销	PIN , FLOAT	1
18	170180049-T110	针阀	VALVE , FLOAT	1
19	381150334-T110	压簧	SPRING , VALVE SET	1
20	172920007-T570	阻风门手柄组合	LEVER ASSY,CHOKE	1
21	171470002-T11B	阻风门控制部件	STAY ASSY., MANUAL CHOKE	1
22	180200001-T110	废气管胶套	GROMMET, BREATHER TUBE	1

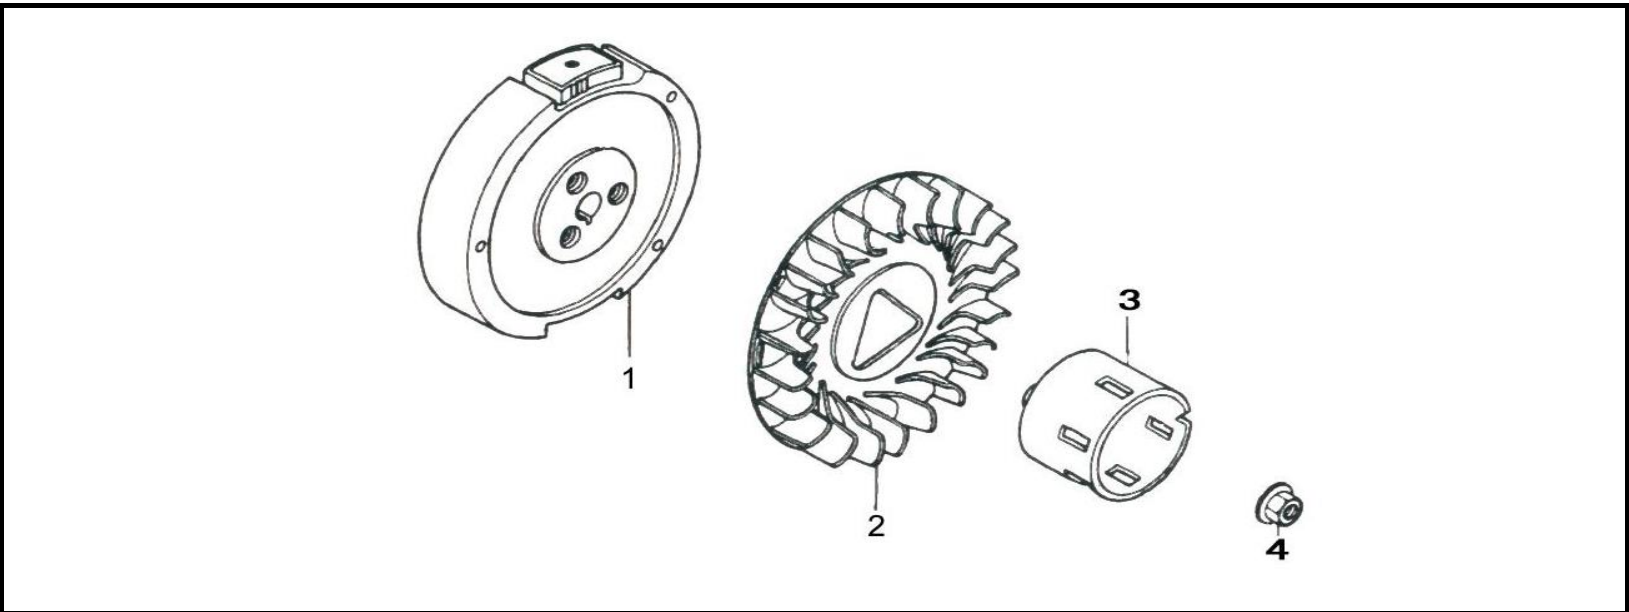


转子部件 (Flywheel)	
-----------------	--

[illegible]

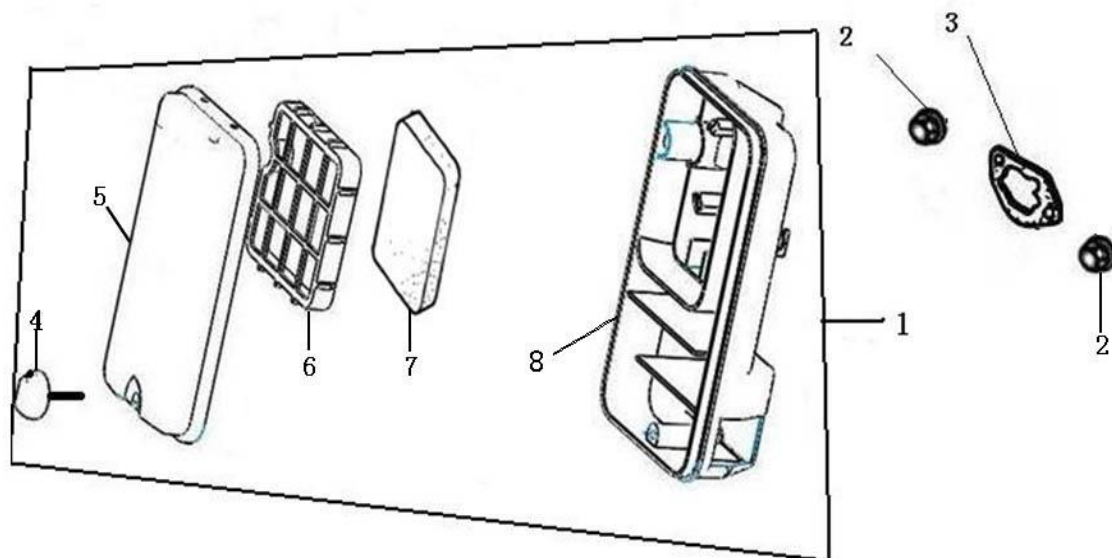


空滤器 (Air cleaner)

序号	零部件图号	零部件名称	Description	数量 (Reqd. No.)
Ser.No.	Part No.			LC6500-J
1	180020346-T56B	空滤器	AIR CLEANER	1
2	380370048-0001	六角法兰面螺母	NUT, FLANGE	2
3	170430070-T11D	化油器密封垫	PACKING, AIR CLEANER	1
4	180270003-T525	空滤器罩锁紧螺栓	NUT, TOOL BOX SETTING	1
5	180070159-T56B	空滤器壳体盖	COVER, AIR CLEANER	1
6	180330035-T56B	滤芯支撑板体	SEPARATOR,AIR CLEANER	1
7	180130219-T56B	空滤器滤芯	ELEMENT, AIR CLEANER	1
8	180280036-T56B	空滤器座	CASE COMP., AIR CLEANER	1

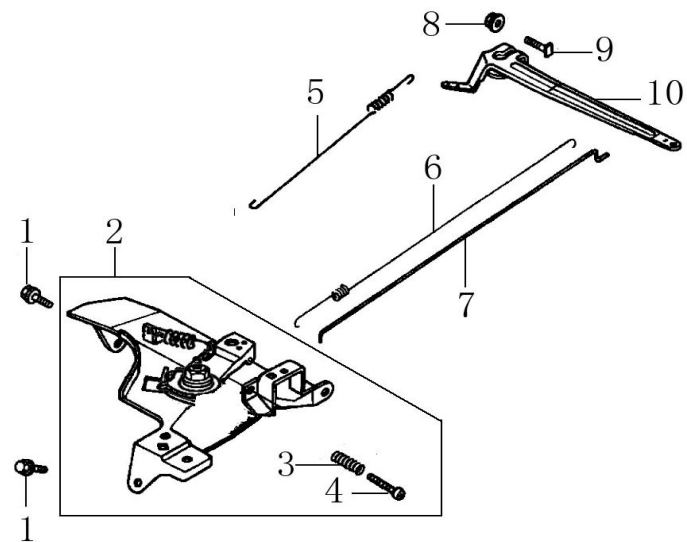


调速控制 (Control)

序号	零部件编号	零部件名称	Description	数量 (Quantity)
Ser.No.	Part No.			LC6500-J
1	380140001-0006	六角法兰面螺栓M6×12	BOLT, FLANGE, 6×12	2
2	171680019-T560	油门操纵手柄组合	BASE COMP., CONTORL	1
3	171660008-T560	调速限位簧	SPRING,CONTROL ADJUSTING	1
4	380200017-0001	十字槽盘头螺钉M5×35	SPRING,CONTROL ADJUSTING	1
5	171600007-T560	调速弹簧(拉簧A)	SPRING, GOVERNOR A	1
6	171610001-T110	节气门复位弹簧(拉簧B)	SPRING, GOVERNOR B	1
7	171590005-T110	油门拉杆	ROD, GOVERNOR	1
8	380370048-0001	螺母 M6	NUT, FLANGE, 6MM	1
9	380250002-T040	方头平端紧定螺钉M6×21	BOLT, GOVERNOR ARM	1
10	171620003-T110	调速支架	ARM, GOVERNOR	1

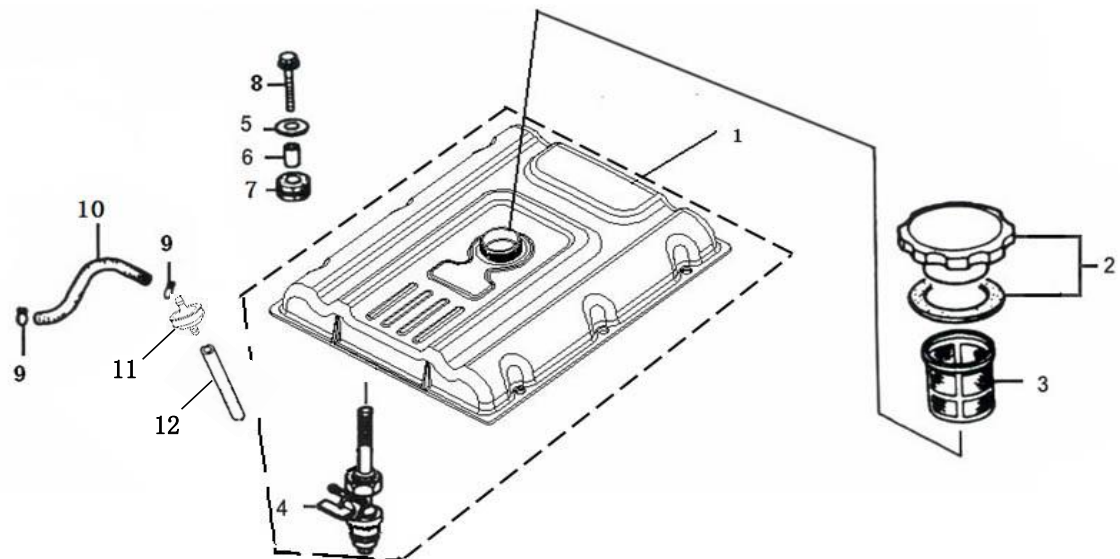


燃油箱 (Fuel tank)

序号	零部件编号	零部件名称	Description	数量 (Quantity)
Ser.No	Part No.			LC6500-J
1	170500891-T611 170080057-T560	油箱	TANK COMP., FUEL	1
2	170870101-T611	油箱盖	CAP COMP.,FUEL FILLER	1
3	170720011-T611	燃油滤网组合	FILTER, FUEL TANK	1
4	170980081-T251	油开关	COCK COMP., FUEL	1
5	380450444-0002	平垫 $\phi 6 \times \phi 25 \times 2$	WASHER $\phi 6 \times \phi 25 \times 2$	6
6	170710014-T520	油箱衬管	COLLAR, TANK CUSHION	6
7	170700125-T52R	油箱减震胶垫	RUBBER, FUEL CUSHION	6
8	380140103-0004	六角法兰面螺栓M6×25	BOLT, FLANGE, 6×25	6
9	380950188-0001	管夹	CLIP, TUBE	2
10	380750530-T611	油管	TUBE, FUEL	1
11	170010017-T350	燃油滤清器	STRAINER,FUEL	1
12	380750507-T53A	油管	TUBE, FUEL	1

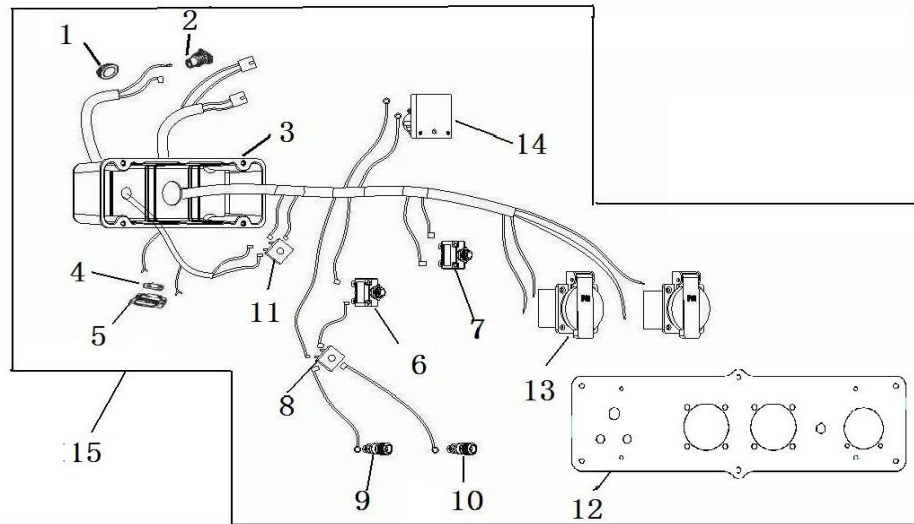


控制面板 (Control panel)

序号 Ser.No.	零部件图号 Part No.	零部件名称	Description	数量 (Reqd. No.)
				LC6500-J
1	380930044-T560	定位线卡	GROMMET	1
2	380930032-T560	定位线卡	GROMMET	1
3	271950019-T611	面板后罩壳	CASE, CONTROL PANEL	1
4	380990008-T560	保险管	FUSE , RECTIFIER	1
5	272490009-T560	保险管盒组合	CASE, FUSE CONNECTOR	1
6	271290035-T523	过流保护器	PROTECTOR (10A)	1
7	271290054-T56F	过流保护器	PROTECTOR (25A)	1
8	271920001-T523	整流桥	RECTIFIEER BRIDGE	1
9	272080001-T567	正极接线柱	POST,ARODE	1
10	272090001-T567	负极接线柱	POST,CATHDE	1
11	271920001-T611	整流桥	RECTIFIEER BRIDGE	1
12	271860105-T611	控制面板	CONTROL PANEL	1
13	271890022-T560	电源插座组合	SOCKET	2
14	281910009-T520	电压表	VOLTMETER	1
15	271851125-T611	控制面板部件	CONTROL PANEL ASSY	1

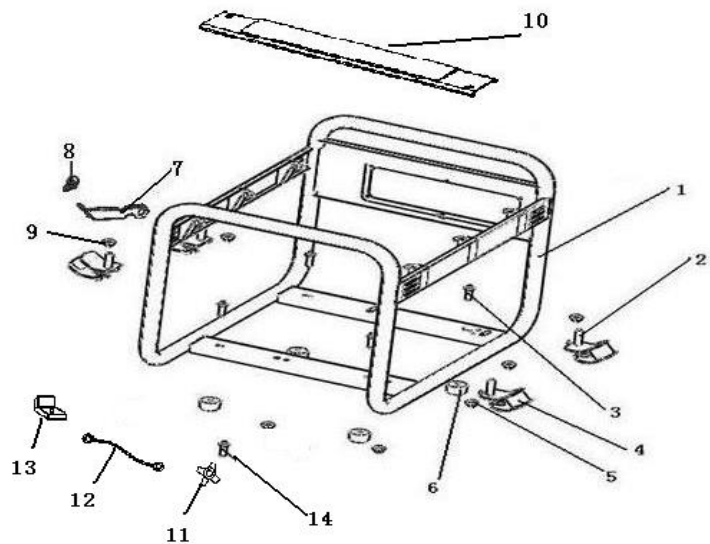

机架 (Frame)

序号	零部件编号	零部件名称	Description	数量 (Quantity)
Ser.No	Part No.			LC6500-J
1	300720216-T611	机架部件	FRAME COMP.	1
2	300780002-T560	主机缓冲座	RUBBER LEFT, BOTTOM	2
3	380140215-0003	法兰面螺栓M6×14	BOLT, FLANGE, 6×14	4
4	300790002-T560	主机缓冲座2	RUBBER RIGHT, BOTTOM	2
5	380370007-0004	六角法兰面螺母M8	NUT, FLANGE, 8MM	4
6	300770005-0001	机架减震座	RUBBER , SHOCK ABSORBER	4
7	300710058-T560	空滤器支架	STAY, AIR CLEANER	1
8	380140215-0003	法兰面螺栓M6×14	BOLT, FLANGE, 6×14	1
9	380370077-0001	六角法兰面螺母M10	NUT, FLANGE, 10MM	4
10	170650016-0001	油箱支架	FUEL TANK BRACKET	1
11	381630001-T560	防滑垫片	GASKET	1
12	272980004-T56B	通机接地线	GOUND LINE	1
13	272030006-T501	接地端子组合	TERMINALI SET,EARTH	1
14	380140333-0004	螺栓M6×18	BOLT 6X18	1

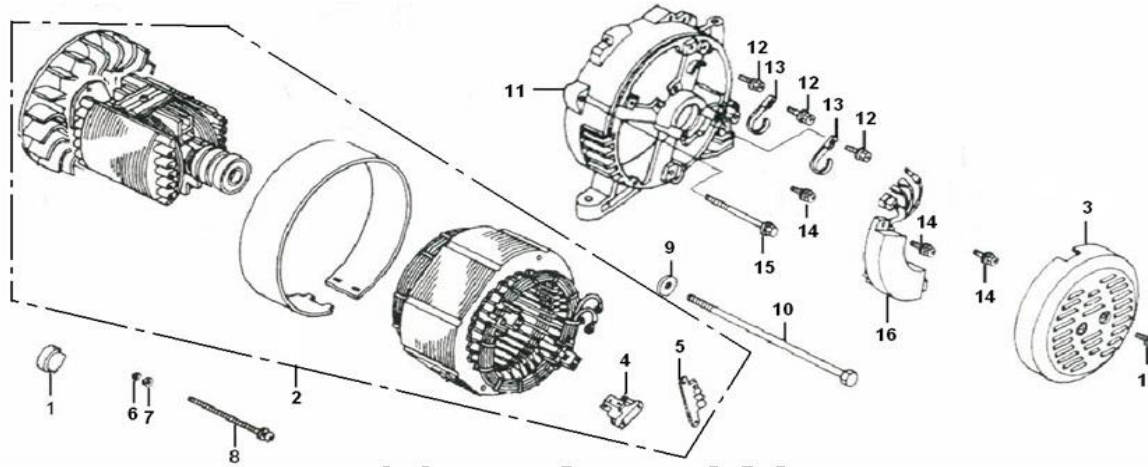

定子/转子/后支撑 (Stator/Totor/Housing)

序号	零部件图号	零部件名称	Description	数量 (Reqd. No.)
Ser.No	Part No.			LC6500-J
1	660030002-T560	电机挡块	GROMMET, CRANKCASE	1
2	660080285-T611	电机部件	ALTERNATOR PARTS	1
3	660020002-T560	电机后端盖	COVER, GENERATOR END	1
4	660120001-T560	碳刷组合	BRUSH ASSY.	1
5	660140001-T560	电压接线板	TERMINAL, VOLT CHANGE	1
6	660780001-T560	电机定子螺母	NUT	2
7	380460005-0003	弹垫性圈	WASHER, SPRING	2
8	380140496-0001	六角头法兰面螺栓	BOLT, FLANGE	2
9	380450515-T560	平垫圈	WASHER	1
10	380070185-T570	六角头螺栓	BOLT, HEX.	1
11	660010002-T560	电机后支撑	HOUSING, RR	1
12	380140167-0002	六角头法兰面螺栓	BOLT, FLANGE,	7
13	380900061-T560	箍带	TIE, CABLE	2
14	380140053-0002	六角头法兰面螺栓	BOLT, FLANGE	3
15	380140349-T570	六角头法兰面螺栓	BOLT, FLANGE	4
16	660150115-T560	调压器	REGULATOR ASSY.,AUTOMATIC VOLTAGE	1